

## 7440 3-Dial Dual Access Combi-Cam Ultra Combination Lock

You can set a new combination for your 7440 3-Dial Combi-Cam Ultra any time by following the below directions:

### Combination Reset Instructions

1. Set the combination to the number that opens the cabinet lock (factory default setting is **0-0-0**). The combination must be on the opening number prior to resetting.
2. On top of the lock is the **code reset button**. Press and keep pressed down code reset button until you finish setting your new combination.
3. Set your personal combination by turning dials to desired combination.
4. Release code reset button and your combination is set. Make a note of the new combination.
5. To lock, rotate one or more dials after lock is closed. To open lock, turn dials to your personal combination.

### Discovering Combination Using Key

1. Open with master key to unlocked position.
2. While in the unlocked position, turn each dial until it stops.
3. Once all dials have stopped, current combination has been discovered and can be reset.

