

7850 Combi-Cam™ 3-Dial Combination Lock

You can set a new combination for your Combi-Cam any time by following the below directions:

Precautions to not get locked out during combination reset:

- Confirm all three dials are at code you intended prior to releasing change button. As you set later dials, you can accidentally shift prior dials so make sure you confirm the code prior to releasing the change button.
- While setting the lock, do not release the change pin. If you release pin and start turning a dial, combination would be that code at moment you briefly let go.

Change/Reset Instructions

 
1. Set the combination to the number that opens the cabinet lock (factory default setting is **0-0-0**). The combination must be on the opening number prior to resetting.
2. If lock is installed, set/reset combination with the door/drawer in the open position.
3. On the underside outer edge of the lock there is a hole for the *code reset button*. Rotate the face of the cam until the *code reset button* comes into view. Push this pin in with a paper clip and **keep it pushed in** until you are done setting the new combination.
4. Set your personal combination by turning the dials to the desired combination.
5. Release the *code reset button* and your combination is now set. Change your combination any time and as often as you want.
6. To lock, rotate to "locked" position. Rotate one or more dials after lock is closed. To open lock, turn dials to your personal combination.

NOTES:

If your Combi-Cam does not open on the default code it has been changed and you do not know the current code, you are locked out. There is no way to retrieve your code.

Follow the directions below to install the Combi-Cam such that the combination will be non-resettable by the end-user:

1. Take off the screw to the cam and remove the cam and the "stop cam."
2. Rotate the cylinder 180 degrees and then put the "stop cam" and the cam back on.

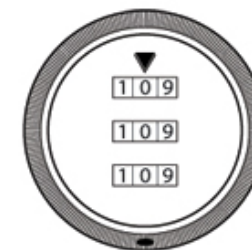

↑
Code Reset
Button