

PRODUCT DATA SHEET



7803 Combi-Cam Round 4-Dial Combination Cam Lock




Chrome




Black

DIMENSIONS

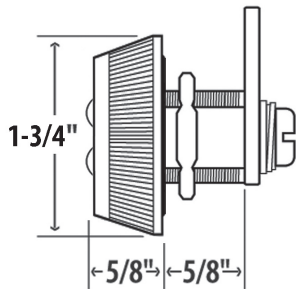

MOUNTING CUTOUT

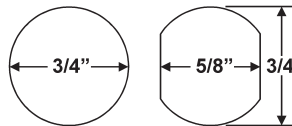

Included Accessories

Pronged wood washer, fixing nut, 90° stop cam (not shown), cam screw and lock washer, and two cams (3/4" straight cam, 1-1/2" straight cam).

SPECIFICATIONS

Function: Cabinet door or drawer combination cam lock

Keyless/Combination: 4-dial combination with up to 10,000 possible combinations

Resettable: To change the combination, set it to the opening combination, depress the change pin, and then change to the new combination

Barrel Diameter: 3/4"

Cylinder Lengths: 5/8"

Body: Zinc, steel

Cam Rotation: 90° stop cam placement allows cam to rotate 90° to the left or right

Finish: Chrome or Black

Packaged: 20 per box / 100 per case

Included Accessories

Pronged wood washer, fixing nut, 90° stop cam, cam screw and lock washer, and two cams (3/4" straight cam, 1-1/2" straight cam)

Optional Accessories

Finger Pull #7803-FP: For use as a cabinet handle. Mounts between the Combi-Cam and cabinet surface

Optional Cams: Listed in the table below

Item	Finish	Cyl. Length	Fits Max. Material Thickness
7803S	Chrome	5/8"	3/8"
7803S-BLK	Black	5/8"	3/8"
Accessory Items (Sold Separately)			
7803-FP	Finger Pull		
7850-LC-1-19/64	1-19/64" straight cam		
7850-LC-1-15/16	1-15/16" straight cam		
7850-OC	1-1/2" x 1/4" offset cam		
7850-OC-1-3/8	1-3/8" x 7/16" offset cam		
7850-OC-60MM	2-1/3" x 1/4" offset cam		



WARNING: This product can expose you to chemicals including chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

206-363-3290 | 800-525-0954

www.olympuslock.com

© 2025 Olympus Lock, Inc.



**OLYMPUS[®]
LOCK[™]**



7803

**Combi-Cam Round
4-Dial Combination Cam Lock**


PRODUCT DATA SHEET

Optional Accessories


Optional Cams

Width: 3/4"
Thickness: 1/8"

Straight Cams

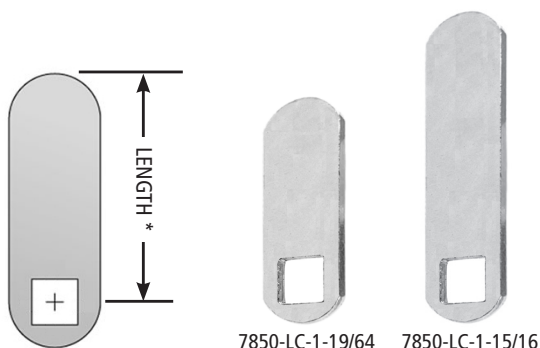

Offset Cams

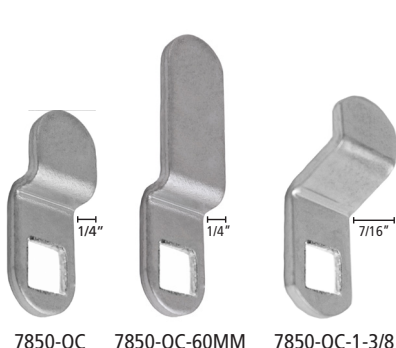

* LENGTH =

The distance from the center of the mounting hole to the top of the cam.

SKU	Length*
7850-LC-1-19/64	1-19/64"
7850-LC-1-15/16	1-15/16"

SKU	Length*	Offset
7850-OC	1-1/2"	1/4"
7850-OC-1-3/8	1-3/8"	7/16"
7850-OC-60MM	2-1/3"	1/4"


Finger Pull



Combination Reset Instructions

Important Precautions to Avoid Being Locked Out During Combination Reset

- Before releasing the reset button, confirm that all four dials are set to the code you intended. While adjusting later dials, earlier dials can sometime shift.
 - Keep the reset pin pressed in throughout the entire process. If the pin is released while a dial is being turned, the lock will record that momentary code as the new combination.
- Set the lock to the current opening code (factory default is **0-0-0-0**). The lock must be on the correct opening code before resetting.
 - If the lock is installed, always reset the combination with the door or drawer open.
 - Locate the reset button on the underside outer edge of the lock. Rotate the cam until the button is visible. Using a paper clip, press and hold the button firmly until the new combination is fully set.
 - Choose your new combination by turning the dials in order: start with dial 1, then continue with 2, 3, and finally 4.
 - Release the reset button. Your new combination is now active. You may change your code at any time, as often as needed.
 - To lock, rotate to the "locked" position, then turn one or more dials away from the opening code. To unlock, turn the dials to your personal combination.

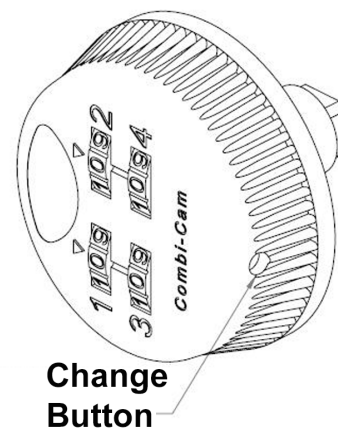

Notes: If your Combi-Cam does not open with the default code, it has already been changed. Without knowing the current code, there is no way to retrieve it.