



Typical Installation

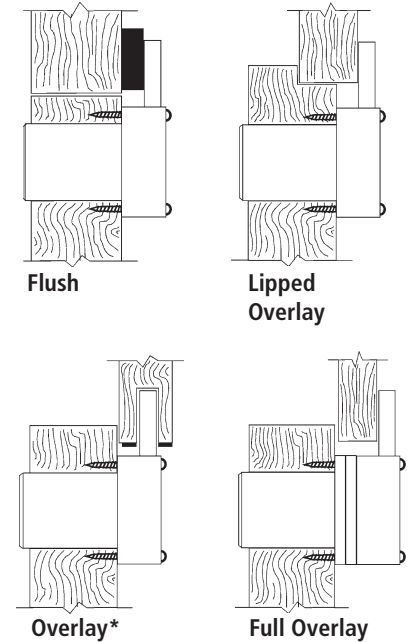

*Overlay installation is not recommended for particleboard.


Included Accessories:

- 2 copper plated keys
- 56-1 bar strike
- 4 lock mounting screws

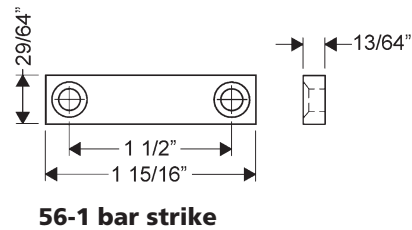

Optional spacers

Note: use of spacers and strikes depends on application and material thickness.

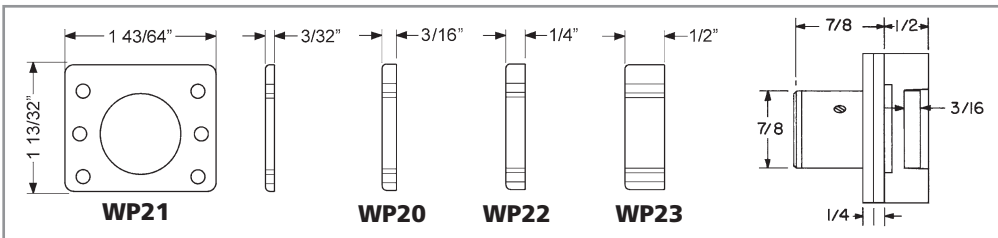

Installation/handling for key-retaining option



Drill Guide Cut out this handy drill guide for easy installation.

