



# N078DR Deadbolt Cabinet Door Lock

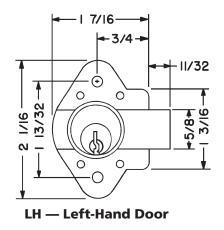

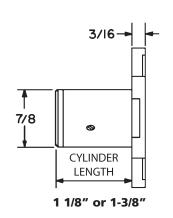

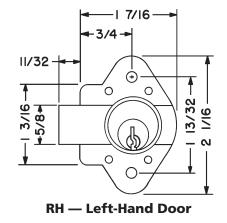

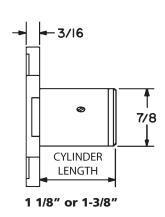





**Typical Installation** 

## **Included Accessories:**


2 nickel plated keys 2 lock mounting screws

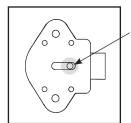


Alignment pin allows for sideways or upside-down mounting.

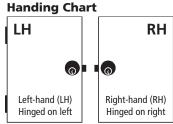

**Optional spacers** Note: use of spacers and strikes depends on application and material thickness.

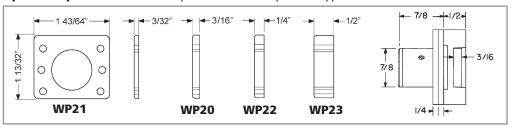

# **Optional long bolt**



### Flush Mounted Lock

Note: Depending on your application of overlay, full overlay, or lipped overlay, you may need to use one of our optional strikes.